INSTALLATION INSTRUCTIONS

Item# N1518-613

READ AND SAVE THESE INSTRUCTIONS

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER. VERTISSEMENT! COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DU DISJONCTEUR.

PREPARATION THE FIXTURE (Fig. 1)

- 1. Shut off power at the fuse box or circuit breaker box and remove the old fixture including the mounting hardware.
- 2. Carefully unpack your new fixture and lay out all the parts in a clean area. Take care not to misplace any small parts necessary for installation.
- 3. Loosen canopy screw (D) to remove mounting plate (A) from canopy (B). Position mounting plate (A) to ceiling and mark location of the four mounting holes. Pre-drill the holes for plastic anchors (G). Insert plastic anchors (G) into ceiling.
- 4. Determine desired hanging height and use a pair of proper chain pliers to remove and discard excess chain. Then attach quick link (H) to the end of chain (E) and fixture loop.
- 5. Carefully feed fixture wires and support cable (X) through quick link (H), chain (E) and canopy (B).
- 6. Feed fixture wires and support cable (X) through mounting plate (A) and run support cable (X) through the hanger bar (Not provided) inside the junction box, then secure support cable (X) with set screw assembly (K) provided as shown in Fig. 1.
- 7. Attach mounting plate (A) to junction box (Not included) using junction box screws (C). The side of mounting plate (A) marked "GND" must face out.
- 8. Secure mounting plate (A) by screwing wood screw (I) through the holes on mounting plate (A) into plastic anchors (G).

CONNECTING THE WIRES

 Connect the electrical wires as shown in Fig.2. Making sure that all wire connectors (F) are secured. If your junction box has a ground wire (green or bare copper), connect fixture's ground wire to it. Otherwise, connect fixture's ground wire directly to mounting plate (A) using green screw provided.


COMPLETING THE INSTALLATION


- 10. Attach canopy (B) to mounting plate (A) and secure with canopy screw (D).
- 11. Install (4) four candelabra base bulbs (J) up to 40 watts or CFL or LED equivalent (not included) in accordance with the fixture's specification. DO NOT EXCEED THE MAXIMUM WATTAGE RATING! (NE PAS DEPASSER LA PUISSANCE NOMINALE MAXIMALE!).
- 12. Attach the hook of tassels (L) onto fixture body.

Your installation is now complete. Return power to the junction box and test the fixture.

Note: Illustration (Fig. 1) on this manual is for installation purposes only. It may or may not be identical to the fixture purchased.

Warning: This luminaire must be mounted or supported independently of an outlet box.

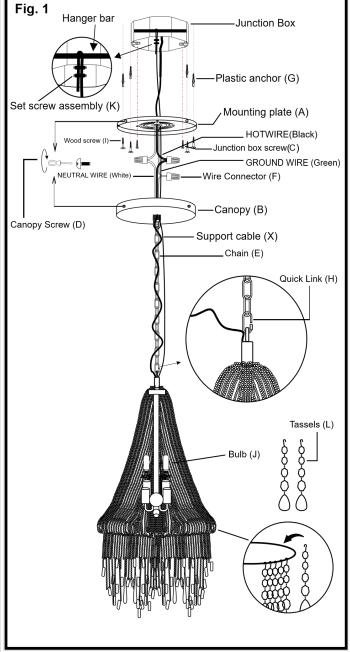

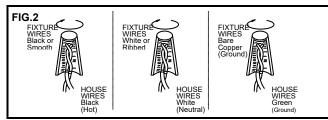



Notice: It is important to use proper chain pliers (not included) To OPEN and CLOSE the chain included with this fixture. Do not open them with other tools that may twist or stress the chain links. It is important to use proper chain pliers like the ones shown in the diagram.



