## INSTALLATION INSTRUCTION

Item# N1949

## **READ AND SAVE THESE INSTRUCTIONS**

# WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER. AVERTISSEMENT! COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DU DISJONCTEUR.

#### **PREPATION**

- 1. Shut off the power at the circuit breaker box and, remove the old fixture including the mounting hardware.
- Carefully unpack your new fixture and lay out all the parts on a clear area. Take care not to lose any parts necessary for installation.

#### ASSEMBLING THE FIXTURE(Fig.1)

- Determine desired hanging height and thread rods (M, N, O, P) to the couplings (Q). Pass wires carefully through each rod.
- 4. Thread the swivels (L) into the rod (M).
- 5. Insert all thread of swivels (L) into the holes in canopy (K), then place the metal plate (H), support cable (F) and lock washers (I) over all thread, then secure with hex nuts (G).

#### **MOUNTING THE FIXTURE (Fig.1)**

- 6. Position the mounting plate (B) through the fixing holes onto the ceiling and make marks, drill pilot holes for wood screws (C) into the ceiling, then insert plastic anchors (A) into the holes.
- Secure mounting plate (B) to outlet box (Not included) with junction box screws (E) (Size: #8-32\*0.6"L), then secure the junction box with wood screws (D) (Size: 8#x1"L) into plastic anchors (A) in the ceiling. Make sure the side of mounting plate marked "GND" must face out.
- 8. The support cable is provided to support the weight of the fixture while wiring. Attach the hook (E) on the end of the support cable to the mounting plate (B). Carefully allow the support cable to support the weight of the fixture while wiring.

## **CONNECTING THE WIRES (Fig.2)**

- 9. Connect the electrical wires as shown in Fig.2, making sure that all wire connectors are secured. If your junction box has a ground wire (green or bare copper), connect the ground wires to it. Otherwise, connect the ground wire directly to the mounting plate (B) and secure using the green screw provided.
- 10. Tuck wire connectors neatly into the junction box.


#### **COMPLETING THE INSTALLATION (Fig. 1)**


- 11. Raise the canopy (K) to the mounting plate (B), and secure with mounting screws (J) (Size: #8-32\*0.5"L).
- 12. Install arms (R) on both ends of the tube (S).
- 13. Install the crystal glass (V, W) onto the fixture body and secure with the screws (U) using wrench (T) (Provided). Don't over tighten.

# NOTE: When installing screws (U), it is necessary to leave 1-2 millimeters outside.


14. Install (8) eight candelabra base bulbs up to 60 watts each or CFL or LED equivalent (not included) in accordance with the fixture specification. (DO NOT EXCEED THE SPECIFIED WATTAGE!) (NE PAS DEPASSER LA PUISSANCE NOMINALE MAXIMALE!)

Your installation is now complete. Return power to the junction box and test the fixture.

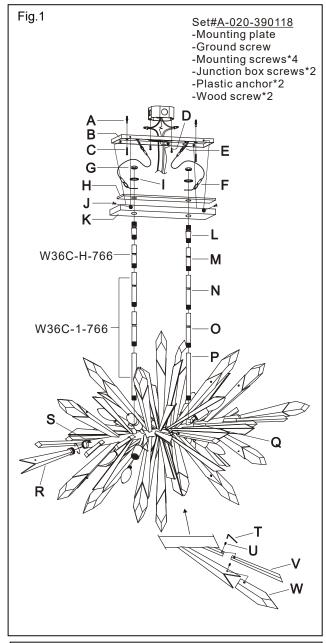

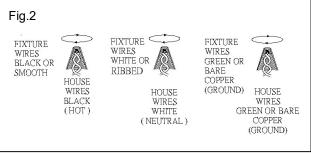




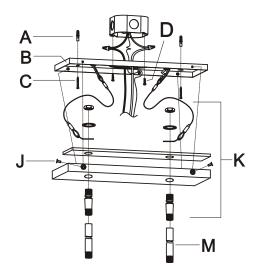

## a. Hardware Bag:

- A. Plastic Anchors \*2
- B. Mounting Plate \*1
- C. Wood Screws \*2
- D. Junction Box Screws \*2
- J. Mounting Screws \*4
- K. Canopy \*1
- L. Wrench \*1

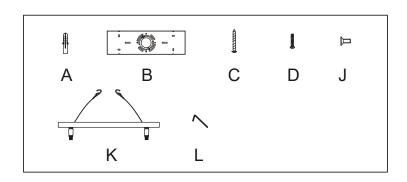

## b. Hardware Bag:

N, O, P. Rod 12" \*6

M Rod 6" \*2

