

INSTALLATION INSTRUCTIONS

Item#2147-735 (New. 11/14/2023)

READ AND SAVE THESE INSTRUCTIONS

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.

AVERTISSEMENT! COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DU DISJONCTEUR.

MOUNTING THE FIXTURE (Fig.1)

1. Shut off power at the fuse box or circuit breaker and remove the old fixture included the mounting hardware.
2. Carefully unpack your new fixture and lay out all the parts on a clean area. Take care not to lose any small parts necessary for installation.
3. Remove screws (F) on mounting plate (B) from the canopy (E).
4. Position mounting plate (B) on ceiling and mark location of two drywall anchors (A). Pre-drill holes for drywall anchors (A). Insert drywall anchors (A) into ceiling.
5. Attach mounting plate (B) to junction box (not included) with mounting screws (D) (Size: #8-32N*L0.5") and wood screws (C) into drywall anchors (A). The side of the mounting plate marked "GND" must face out.
6. Thread rods (L) into all threads (M) of fixture body until tight.
7. Determine the desired hanging height and use a pair of proper chain pliers to remove and discard excess chain.
8. Use a pair of pliers to open one end link of chain (J), attach chain (J) to the fixture's loops (K), and close the link. Connect the other end of chain link to the canopy's loops (I) in the same way.
9. Lace the fixture's wires through the chain links and pull until taut. Feed the fixture wires through the loop (I) and canopy (E).
10. The support cable is provided to support weight of fixture while wiring. Align the fixture to mounting plate (B) and attach hook (G) on the end of support cable (H) into a slot located on mounting plate (B). Carefully allow the support cable (H) to support weight of the fixture while wiring.

CONNECTING THE WIRES (Fig. 2)

11. Connect the electrical wires as shown in Fig.2, making sure that all wire connectors are secured. If your junction box has a ground wire (green or bare copper), connect fixture's ground wire to it. Otherwise, connect the fixture's ground wire directly to mounting plate (B) using green screw provided. After the wires are connected, tuck them carefully inside the junction box.

FINISHING THE INSTALLATION (Fig.1)

12. Place canopy (E) onto mounting plate (B) and secure with screws (F).
13. Place candle covers (O) over sockets (P).
14. Install (6) six candelabra base bulbs (N) up to 60 watts each or CFL or LED equivalent (not included) in accordance with the fixture specification. **—DO NOT EXCEED THE MAXIMUM WATTAGE RATING! (NE PAS DEPASSER LA PUISSANCE NOMINALE MAXIMALE!).**


Your installation is now complete. Return power and test the fixture.

Note: Illustration (Fig.1) on this manual is for installation purposes only. It may or may not be identical to the fixture purchased.

Fig. 1

Set#A-021-A-021-350118A


- Mounting plate
- Ground screw
- Mounting screw *2

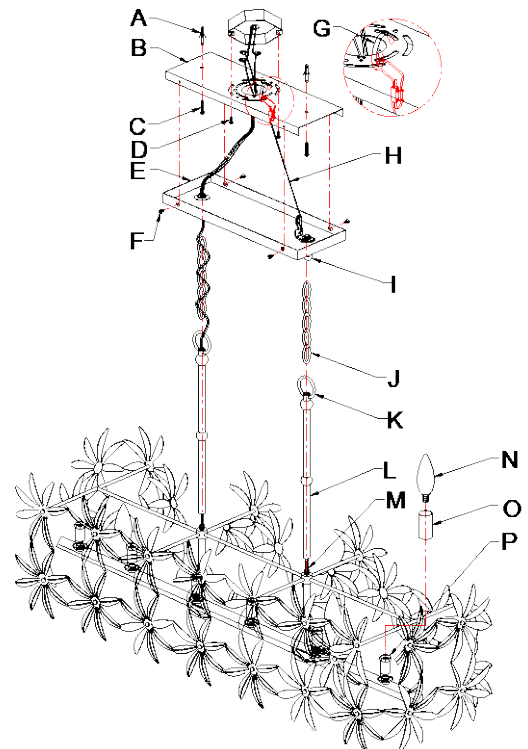

Candle Cover#CCV24048P-735


Chain#HCH2072-735

Fig. 2

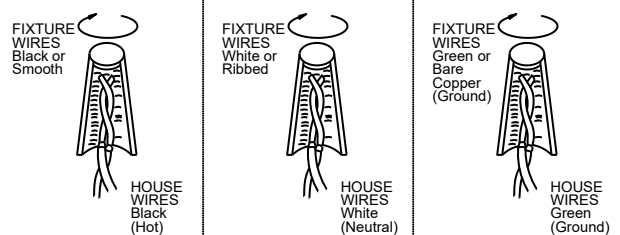

CHAIN HUNG FIXTURE INSTRUCTION

Notice: It is important to use proper chain pliers (not included) To OPEN and CLOSE the chain included with this fixture. Do not open them with other tools that may twist or stress the chain links. It is important to use proper chain pliers like the ones shown in the diagram.

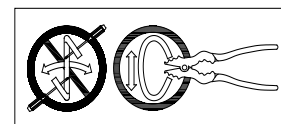

LA-3743E

ETL LISTED
Intertek

american
lighting
association