

# INSTALLATION INSTRUCTIONS

Item#2192-863

## READ AND SAVE THESE INSTRUCTIONS

**WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.**  
**VERTISSEMENT! COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DU DISJONCTEUR.**

### PREPARATION THE FIXTURE

1. Shut off power at the fuse box or circuit breaker box and remove the old fixture including the mounting hardware.
2. Carefully unpack your new fixture and lay out all the parts in a clean area. Take care not to misplace any small parts necessary for installation.
3. Attach mounting plate (A) to the junction box (Not included) using junction box screws (C). The side of mounting plate (A) marked "GND" must face out.
4. Press wire restraint to adjust the desired length of Aircraft cable. (Fig.1)
5. The support cable is provided to support the weight of the fixture while wiring. Align the fixture to mounting plate (A) and attach hook on the end of support cable into a slot located on mounting plate (A). Carefully allow support cable to support the weight of the fixture while wiring (Fig.1).

### CONNECTING THE WIRES

6. Connect the electrical wires as shown in Fig.2. Making sure that all wire connectors (F) are secured. If your junction box has a ground wire (green or bare copper), connect fixture's ground wire to it. Otherwise, connect fixture's ground wire directly to mounting plate (A) using green screw provided.

### COMPLETING THE INSTALLATION

7. Attach canopy (B) to mounting plate (A) and tighten with canopy screw (D).
8. Install (5) five medium base bulbs (J) up to 40 watts or CFL or LED equivalent (not included) in accordance with the fixture's specification. **DO NOT EXCEED THE MAXIMUM WATTAGE RATING! (NE PAS DEPASSER LA PUISSANCE NOMINALE MAXIMALE!).**

Your installation is now complete. Return power to the junction box and test the fixture.

**Note: Illustration (Fig. 1) on this manual is for installation purposes only. It may or may not be identical to the fixture purchased.**

Fig. 1

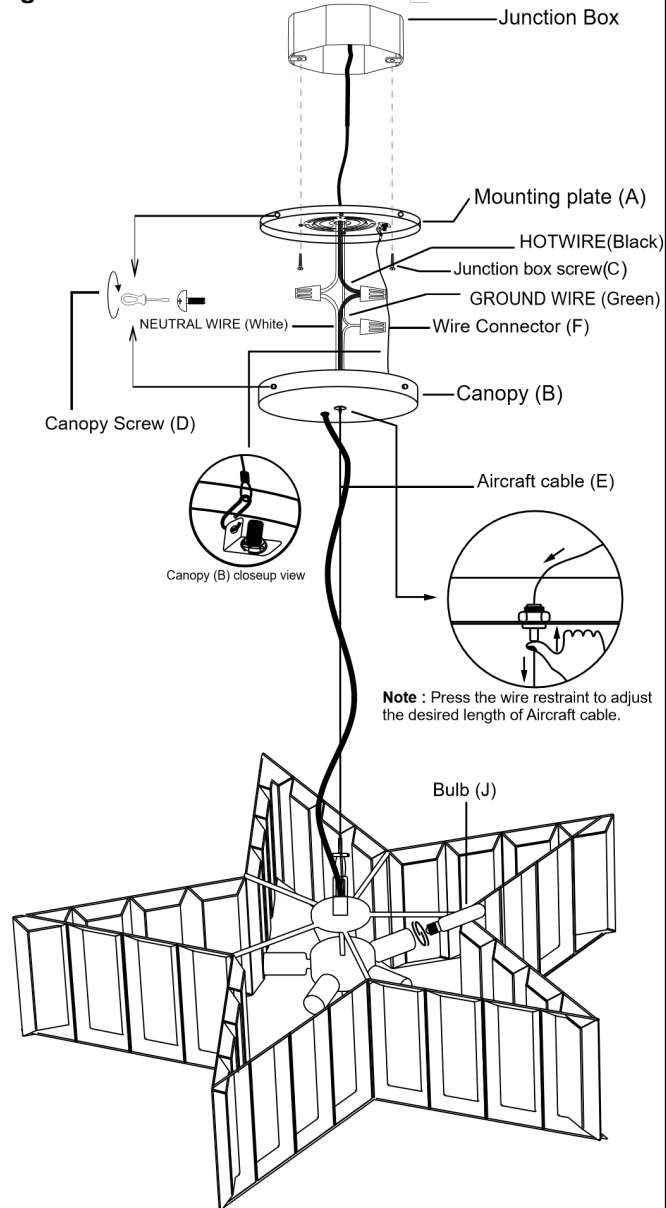


FIG.2

